




**INSTALLATION INSTRUCTIONS FOR THE C6 CORVETTE REAR VIEW MIRROR**

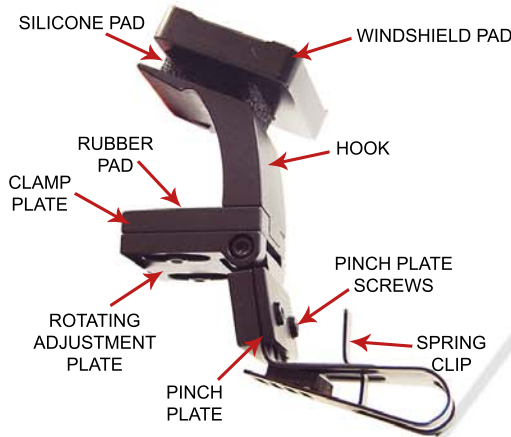


**1 -** Install your radar detector (RD) onto the mount before attaching to the rear view mirror so you can observe how the Spring Clip functions. Squeeze the Spring Clip Release Tab and the back side of the mount together. Push the RD Release button and slide the RD onto the Spring Clip until the RD hits the bottom of the Spring Clip Release Tab. Then release both the Tab and the Button. Now slide the RD just slightly toward you until you hear it lock into position.



**2 -** Observe the illustration above which identifies the components of the mount. Remove the Spring Clip by removing both Pinch Plate Screws.



**3 -** This photo illustrates how the Hook fits into the recessed area behind the mirror. This is just a reference photo as you will not be able to see this during installation.

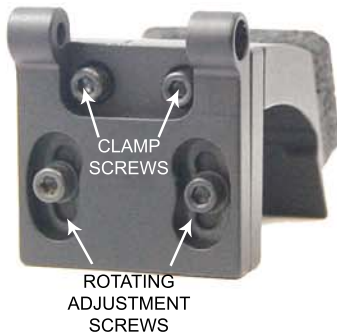

**4 -** The two rotating adjustment screws can be used to move the rotating adjustment plate left/right horizontally to point the radar detector in a desired direction. The two clamp screws are used to secure the mount onto the mirror as shown next in fig 5.



**5 -** Place the Windshield Pad onto the Silicone Pad. Position the mount as shown above. Compress the Silicone Pad into the Windshield Pad as you slide upwards into the recessed area behind the mirror. You will hear the Hook snap into place when it is positioned correctly. **Tighten both clamp screws to secure hook and mount onto mirror.**



**6 -** Install RD onto the mount making sure it locks onto the Spring Clip. You should hear it lock into position. Make necessary adjustments as shown. We recommend adjusting RD as close to bottom of mirror as possible. There may not be enough room for your finger to fit between the RD and the mirror, however the spring clip allows you to move RD downward with one finger while pressing RD buttons with another finger. The RD will return to its original position when released. After all adjustments are made, check that all adjustment screws are tight. Grab long arm of allen wrench to assure screws are securely tightened.



**7 -** If desired, use the 3/4" diameter Support Pad between mirror and RD for additional stability. There are three different thicknesses included depending on gap between RD and mirror after all adjustments are made. Use supplied alcohol pad to clean top of RD before installing Support Pad.

**CAUTION**

**DO NOT** use this mount if it interferes with the adjustability or the operation of your rear view mirror in any way.

**DO NOT** use this mount if the radar detector creates an unsafe viewing obstruction.

**DO NOT** ATTEMPT TO MODIFY THIS PRODUCT. Consult the manufacturer for assistance.

All BlendMount products are accompanied with detailed installation instructions and adjustment tips. You are encouraged to contact customerservice@blendmount.com or call J28 Design at 1-707-664-8234 for further assistance.

Your feedback is very important to us. Please email any questions or comments you have to [customerservice@blendmount.com](mailto:customerservice@blendmount.com)

