



INSTALLATION INSTRUCTIONS FOR BELTRONICS AND ESCORT RADAR DETECTORS


1 - Install your radar detector (RD) onto the mount before installing on the rear view mirror. To release tension from the spring clip, simply squeeze the tab and the back side of the mount together. This will lower the bottom portion of the spring clip allowing you to slide the RD on and off the mount.

2 - Push the RD Release button and slide the RD onto the Spring Clip until the RD hits the bottom of the Tab. Then release both the Tab and the Button. Now slide the RD toward you until you hear it lock into position. Remove the RD a few times so you can observe how the spring clip functions. When used properly, the spring clip avoids putting excessive pressure on the mirror stem when installing and removing the RD.

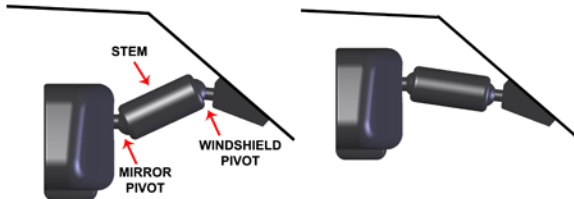

3 - Most compatible mirrors have a stem between the mirror and the windshield that has a pivot on both ends. We recommend that you try moving the mirror upward to minimize any viewing obstruction of the mirror and radar detector. Grab the mirror and move the stem upward using the windshield pivot only. Adjust the mirror to your normal viewing position using the mirror pivot only. Notice the higher location of the mirror as shown above.




4 - Install this mount from the passenger side of the vehicle. Remove the right half of the mount by removing the two socket head cap screws. Be aware that there is a small lock washer on the lower screw. With the left half of the mount still attached, position the mount around the mirror stem as shown above.




5 - Reattach the right side of the mount. Make sure the small lock washer is still on the lower screw and tighten until the screw is fairly snug. Leave the top screw loose so the mount can slide along the mirror stem to the desired location.

BLENDMOUNT ADJUSTMENTS


6 - Install the RD onto the mount. Make the necessary adjustments as shown in fig. 8. We recommend you adjust the RD so it is as close to the bottom of the mirror as possible. Using the vertical adjustment, adjust upward as far as possible while making sure the RD buttons are still accessible. After all adjustments are made, be sure to check that the hinge pivot and vertical adjustment screws are tight. The screw on the very top of the mount should be tightened last. Grab the long arm of the allen wrench to assure that these screws are securely tightened as shown above.

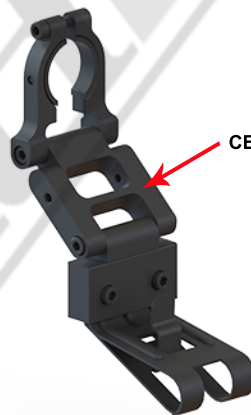

7 - The center link may be removed if desired, or left installed.

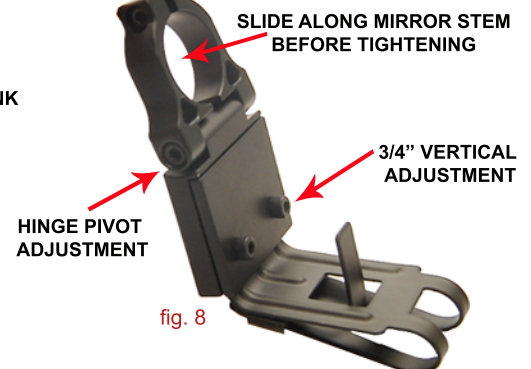

8 - With multiple adjustments available, you should be able to position your RD right where you want it. If you are unable to achieve this, be sure to contact us at 1-707-664-8234

CAUTION

DO NOT use this mount if it interferes with the adjustability or the operation of your rear view mirror in any way.

DO NOT use this mount if the radar detector creates an unsafe viewing obstruction.

DO NOT ATTEMPT TO MODIFY THIS PRODUCT. Consult the manufacturer for assistance.

All BlendMount products are accompanied with detailed installation instructions and adjustment tips. You are encouraged to contact customerservice@blendmount.com or call J28 Design at 1-707-664-8234 for further assistance.

Check the BlendMount Forum for installation tips and some vehicle specific installs.

www.blendmount.com

Your feedback is very important to us. Please email any questions or comments you have to customerservice@blendmount.com