




INSTALLATION INSTRUCTIONS FOR ESCORT IX, REDLINE EX, AND 360C RADAR DETECTORS



1 - The magnet must be removed from the suction cup mount that the radar detector came with.

2 - Unscrew and remove bolt, only the magnetic piece is used with the blendmount.

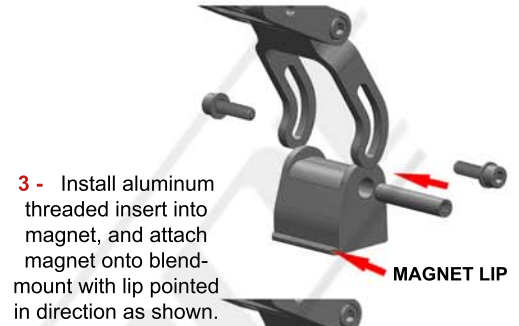

3 - Install aluminum threaded insert into magnet, and attach magnet onto blendmount with lip pointed in direction as shown.



4 - Install mount from passenger side of the vehicle. Remove right half of the mount by removing the two socket head cap screws. Be aware there is a small lock washer on the lower screw. With left half of the mount still attached, position the mount around the mirror stem as shown above.



5 - Reattach right side of the mount. Make sure small lock washer is still on lower screw and tighten until fairly snug. Leave top screw loose so mount can slide towards windshield around the large diameter of the mirror stem. Slide the mount upwards leaving approximately 1/8" of clearance between mount and the windshield. Rotate mount until level from side to side and tighten the top screw.



6 - We recommend you adjust the radar detector as close to the bottom of mirror as possible, while still allowing your finger to push buttons on top of radar, such as the mute button. After all adjustments are made, be sure to check that the hinge pivot and vertical adjustment screws are tight. Grab the long arm of the allen wrench to assure that these screws are securely tightened (**fig. 6A**). The screw on the very top of the mount should be tightened last and does not need to be quite as tight as the other screws. Grab the short arm of the allen wrench when tightening the top screw (**fig. 6B**) to prevent overtightening.



7 - To remove the radar from the magnetic mount, simply tilt the face of the RD up and twist slightly to side, then the magnet will release.

CAUTION

DO NOT use this mount if it interferes with the adjustability or the operation of your rear view mirror in any way.

DO NOT use this mount if the radar detector creates an unsafe viewing obstruction.

DO NOT ATTEMPT TO MODIFY THIS PRODUCT. Consult the manufacturer for assistance.

All BlendMount products are accompanied with detailed installation instructions and adjustment tips. You are encouraged to contact customerservice@blendmount.com or call J28 Design at 1-888-497-8388 for further assistance.

Check the BlendMount Forum for installation tips and some vehicle specific installs.

www.blendmount.com

Your feedback is very important to us. Please email any questions or comments you have to customerservice@blendmount.com



Innovative Design And Precision Manufacturing

BlendMount - US PATENT # D625,580 S, D656,811 S, D653,980 S, D690,245 S, D690,246 S, D690,247 S and other patents pending