




**INSTALLATION INSTRUCTIONS FOR ESCORT IX, REDLINE EX, AND 360C RADAR DETECTOR REPLACEMENT PIECE**



**ALUMINUM THREADED INSERT**

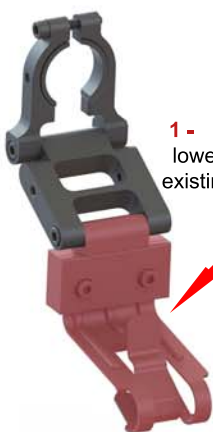

**1 -** Remove the two lower pieces of your existing mount, shown here in red.



**2 -** Install the adapter parts shown here in red.




**UNSCREW HERE**




**MAGNET**

**3 -** The magnet must be removed from the suction cup mount that the radar detector came with.

**4 -** Unscrew and remove bolt, only the magnetic piece is used with the blendmount.

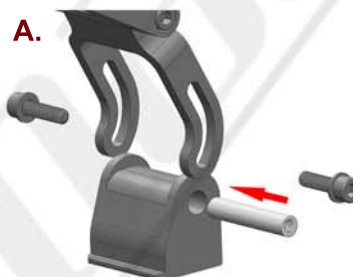


**A.**

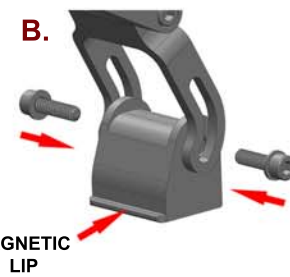

**B.**

**MAGNETIC LIP**

**5 -** Install aluminum threaded insert into magnet (fig A.), and attach magnet onto blendmount with lip pointed in direction as shown (fig B.).

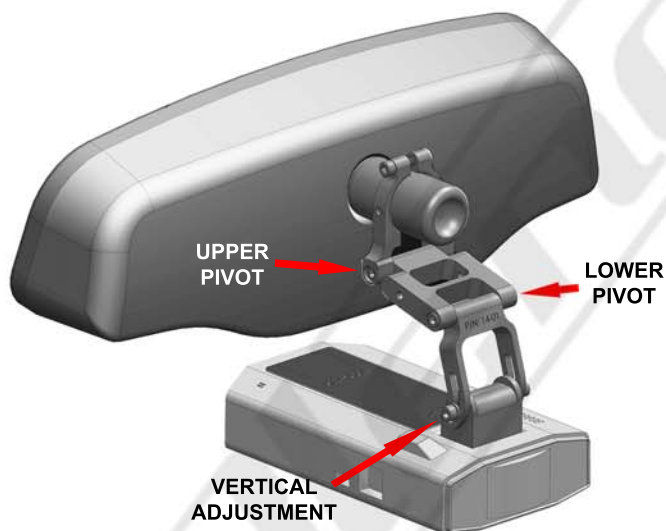


**UPPER PIVOT**

**LOWER PIVOT**

**VERTICAL ADJUSTMENT**

**6 -** Install the RD onto the mount. Make necessary adjustments using the upper and lower pivots, and the vertical adjustment. Leave enough room below bottom of mirror to allow access to top radar detector buttons.

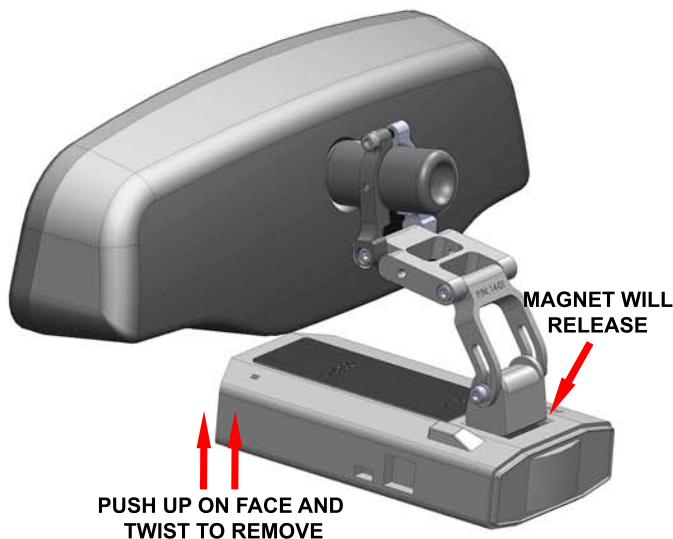

**PUSH UP ON FACE AND TWIST TO REMOVE**

**7 -** To remove the radar from the magnetic mount, simply tilt the face of the RD up and twist slightly to side, then the magnet will release.