




INSTALLATION INSTRUCTIONS FOR THE C6 CORVETTE REAR VIEW MIRROR




1 - Install and remove your radar detector (RD) onto the mount before installing it on the rear view mirror so you can observe how the spring clip functions. To release tension from spring clip, squeeze release tab and back side of mount together as shown above. This lowers bottom portion of spring clip allowing you to slide RD on and off the mount. To install RD, squeeze release tab and slide the clip into the RD until it locks into position. To remove RD, squeeze release tab with one hand and press RD release button with other hand.

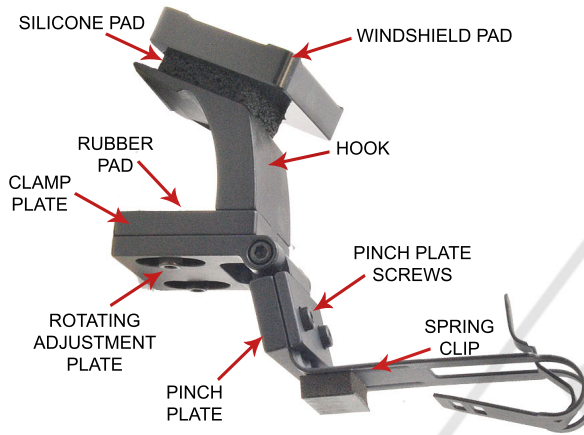

2 - Observe the illustration above which identifies the components of the mount. Remove the Spring Clip by removing both Pinch Plate Screws.



3 - This photo illustrates how the Hook fits into the recessed area behind the mirror. **This is just a reference photo as you will not be able to see this during installation.**

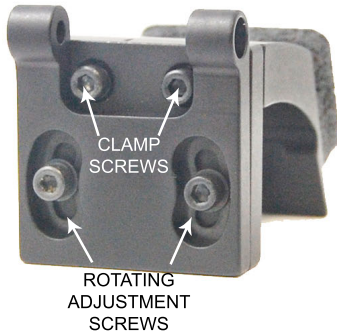

4 - The two rotating adjustment screws can be used to move the rotating adjustment plate left/right horizontally to point the radar detector in a desired direction. The two clamp screws are used to secure the mount onto the mirror as shown next in fig 5.




5 - Place the Windshield Pad onto the Silicone Pad. Position the mount as shown above. Compress the Silicone Pad into the Windshield Pad as you slide upwards into the recessed area behind the mirror. You will hear the Hook snap into place when it is positioned correctly. **Tighten both clamp screws to secure hook and mount onto mirror.**



6 - If the RD is too close to the bottom of the mirror, You may access the buttons on top of the RD by gently pushing downward on the front of the RD with one finger and push the desired button with another finger. Then allow the RD to return to it's original position by gently letting it spring upward. When accessing the buttons, be sure to push the RD downward just enough for your finger to fit between the RD and mirror. **Do not push down more than what is needed.**



SCAN THE QR CODE WITH YOUR SMART PHONE TO VIEW INSTALL VIDEOS

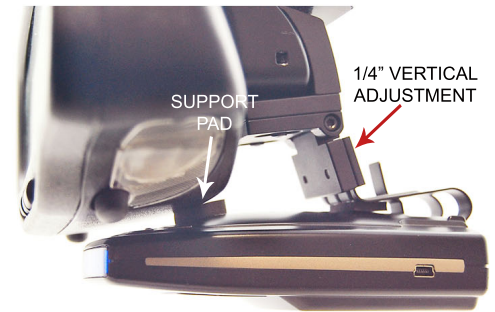

7 - If desired, use the 3/4" diameter Support Pad between mirror and RD for additional stability. There are three different thicknesses included depending on gap between RD and mirror after all adjustments are made. Use supplied alcohol pad to clean top of RD before installing Support Pad.

NOTE : This mount can get extremely hot when sitting in direct sunlight. If you intend to remove your RD frequently, you may want to install the two gray "TOUCH STRIPS" included in the tool kit. Place them where your fingers make contact with the mount. They may be trimmed with a blade or knife.

CAUTION

DO NOT use this mount if it interferes with the adjustability or the operation of your rear view mirror in any way.

DO NOT use this mount if the radar detector creates an unsafe viewing obstruction.

DO NOT ATTEMPT TO MODIFY THIS PRODUCT. Consult the manufacturer for assistance.

All BlendMount products are accompanied with detailed installation instructions and adjustment tips. You are encouraged to contact customerservice@blendmount.com or call J28 Design at 1-707-664-8234 for further assistance.

Your feedback is very important to us. Please email any questions or comments you have to customerservice@blendmount.com

