




INSTALLATION INSTRUCTIONS FOR VALENTINE ONE RADAR DETECTOR UPGRADE KIT

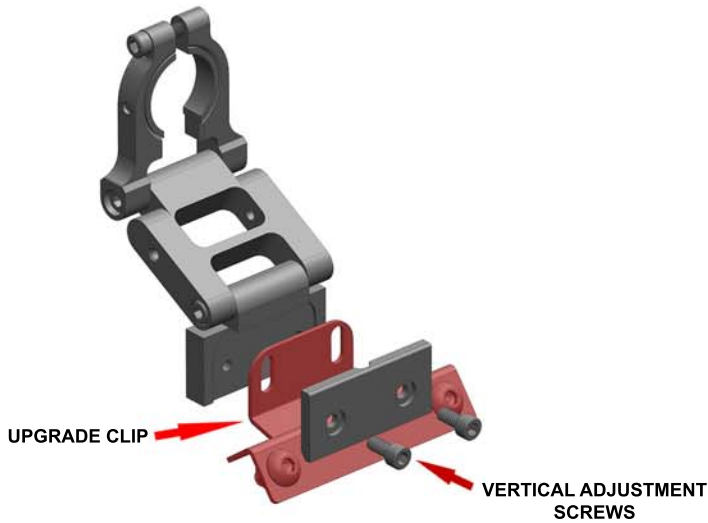

1 - Remove the two suction cups that are on your existing V1 windshield mount. The two holes that were used to secure the suction cups are now used to attach the BlendMount. Then remove the 2 vertical adjustment screws from the blendmount and swap out the bottom clips.


BLENDMOUNT CLIP ADJUSTMENTS



PERFORATION
ALLOWS FOR EASY
BENDING IF NEEDED




A.

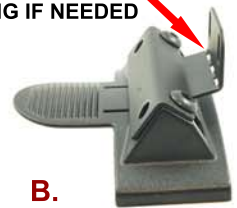

B.

2 - Remove the lock washer and nut from the button head screws and place the BlendMount assembly onto the V1 windshield mount. Re-attach the lock washer and nut, and tighten with the supplied allen wrench. Slid the V1 into its cradle as you would before.

3 - The clip can be installed 2 different ways. Shown in field 'A' is the more common way, and allows the V1 to sit more forward toward the windshield. It can also be installed as shown in field 'B', allowing the V1 sit closer to the driver.

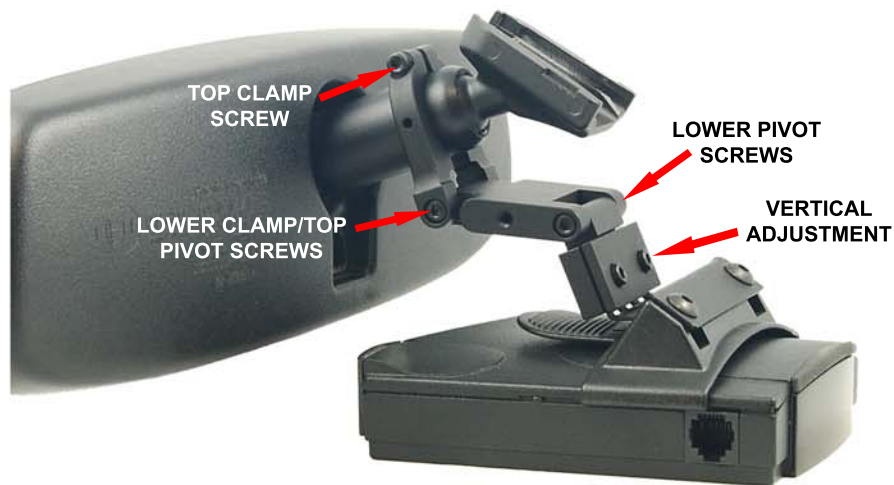

4 - Install the RD onto the mount. Make the necessary adjustments as shown above. Using the vertical adjustment, we recommend you adjust the RD as close to the bottom of the mirror as possible.